

QuikCase Assembly Instructions.

- 1.) Take Material out of the box and check if all parts are included.




- 2.) Measure and Cut Jambs




3.) Install black plastic Jamb pins on all for corners



4.) Install white Zipper clips all around the jambs

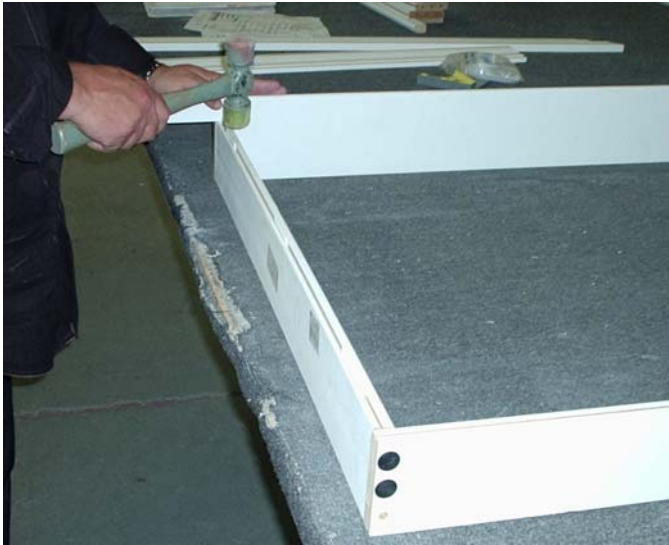

5.) Attach casing with groove to jambs

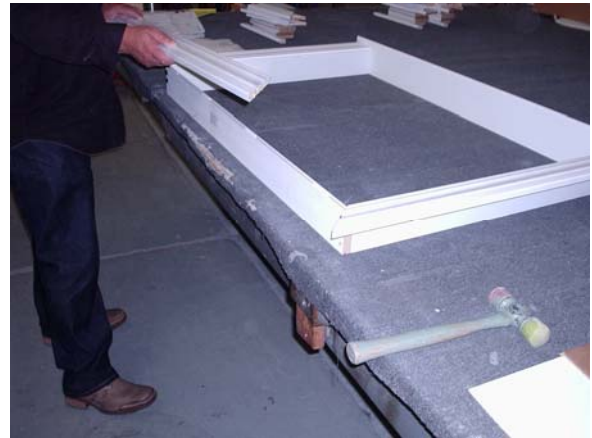

6.) Install brown H-clips in corners



7.) Lift into Window opening and fasten with Nail gun

